


Typical Installation Guide For FRP Cornice

Indepth Framing / Install provided during Submittals

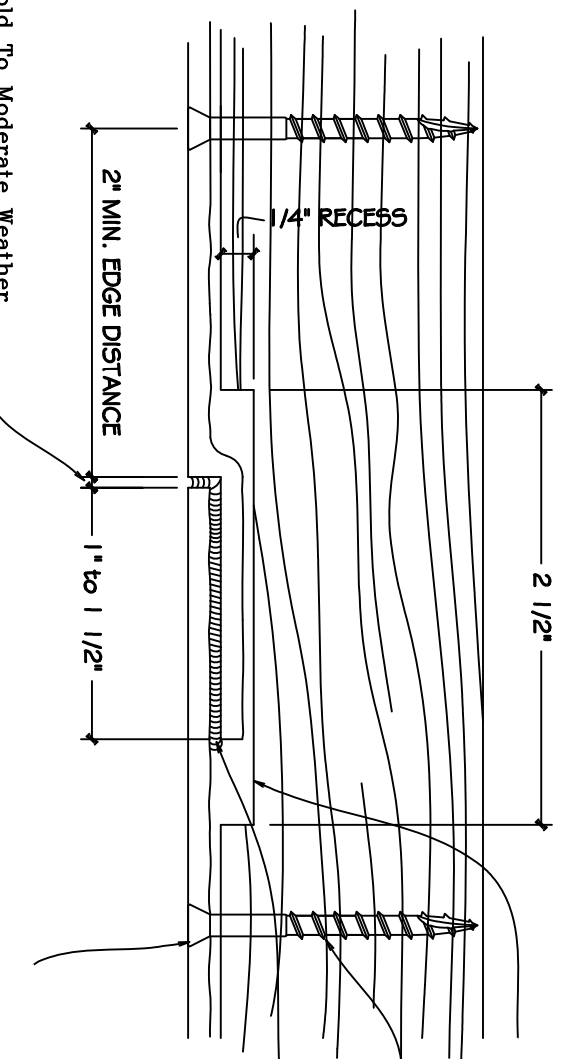

Attachment Framing To
Be Recessed or Notched
@ Lap Joints (Typical)

#7 Countersunk Stainless
Steel Trim Head Screws
(Available Through AMI
For Additional Cost)

Apply Adhesive / Sealant,
Color Matched or Paintable
If Desired, To Lap Joint Prior
To Installation (Sealants
Supplied by Installer)

AMI Can Provide Color Coated Screws
If concealed screws are desired
Installer to apply a skim coat of
Colored Caulk to Each Screw Head (Typical)

In Cold To Moderate Weather
Allow 1/8" at Joint for Expansion

Note:

Installer to provide all screws, caulking, adhesives. FRP is to be counter sunk using proper tools.